


Q72 308
1/72

**A-4C(late) and later
Skyhawk Wheels**
(late type with plain hubs)
for Fujimi, Hasegawa kits



**PUR - Polyurethane
parts**

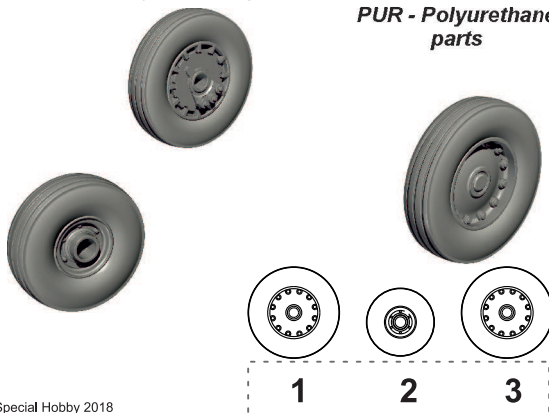

© Special Hobby 2018

Díly ohnuté popř. pokroucené vlivem teplotních změn a stárnutí materiálu, mohou být narovnány do požadovaného tvaru pomocí proudu teplé vody nebo vzduchu (fén na vlasy).

Parts slightly distorted and bent owing to temperature changes or due to material ageing can be straightened to requested shape by hot water or hot air jet. (hair dryer)

This process can be repeated till result is entirely satisfactory.

K lepení použít kyanoakrylátové lepidlo!

For best result gluing use cyanoacrylate glue!

Kontaktní plochy doporučujeme před lepením odmastit
Contact areas ungrease is recommended before gluing.

Visit our official website and e-shop at

www.cmkkits.com

www.specialhobby.eu



OTHER ITEMS - 1:72 SETS

Q72 285 1/72 Tucano T.1 – Wheels Set for Airfix kit

Q72 286 1/72 Tucano T.1 – Ejection Seats

(Martin-Baker MB 8LC), 2 pcs for Airfix kit

Q72 287 Tucano T.1 – Correction Propeller and Spinner for Airfix kit

Q72 300 1/72 P-40N-5 through N-40 Seat with Belts for Special Hobby kit

Q72 307 1/72 A-4A/B/C(early) Skyhawk Wheels

(early with spoke type hubs) for Fujimi kits

Q72 309 1/72 P-40E-N Control Columns (3 pcs.) for S. H. and other kits

Q72 310 1/72 F-4B/J/N/S Phantom II – IFR, for Hasegawa kit

Q72 311 1/72 Remora - Radar Jammer Pod for Mirage F.1 and Mirage 2000

Q72 312 1/72 Sycomor - Chaff/Flare Dispenser for Mirage F.1

Special Hobby, Mezilesí 718, CZ - Praha 9, 193 00,

e-mail: office@specialhobby.eu

Note/Pozn.

Before attaching the mainwheels,
remove brakes from the u/c legs.

Před přilepením kol hl. podvozku
odstraňte z podvozkových noh brzdy

