


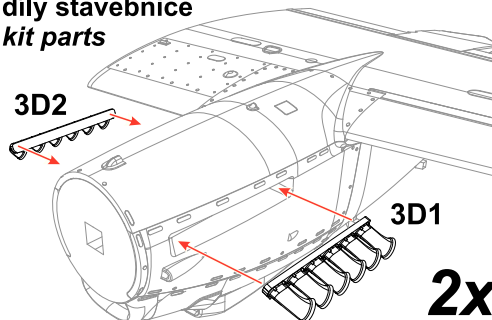

dily stavebnice kit parts




Resinové díly ohnuté popř. pokroucené vlivem teplotních změn a stárnutí materiálu, mohou být narovnány do požadovaného tvaru pomocí proudu teplé vody nebo vzduchu (fén na vlasy). Ohnuté 3D tisky narovnejte ponořením do horké vody, srovnejte je a zchladte studenou vodou. K lepení použít kyanoakrylátové lepidlo! Kontaktní plochy doporučujeme před lepením odmastit. Různé drátky a tyčinky nejsou přiloženy.

Parts slightly distorted and bent owing to temperature changes or due to material aging can be straightened to requested shape by hot water or hot air-jet (hair dryer). This process can be repeated till result is entirely satisfactory. You can also correct bent 3D printed parts: put them into hot water, straighten them and cool them in cold water. For best result use cyanoacrylate glue! Ungreasing contact areas is recommended before gluing. Wires and rods not included.

Special Hobby, Mezileší 718, CZ - Praha 9, 193 00, e-mail: office@specialhobby.eu

Special Hobby offer as well:

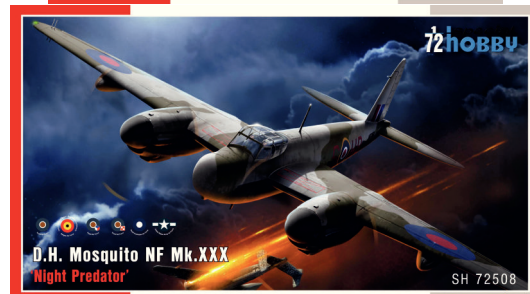

Special Hobby offers for Mosquito kits CMK Figures F72378 Mosquito Pilot and Navigator.

F72378 Mosquito Pilot and Navigator (2 pcs)

Sculpted by M. Antfeist



3D printed set P72041 Mosquito Dinghy Box and resin set 7523 Mosquito Mainwheels and Tailwheel w/Leg as well

