


P72044 F-16 seat 1/72 for Tamiya kits

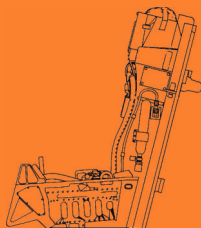

3D-Printed Part



Resinové díly ohnuté popř. pokroucené vlivem teplotních změn a stárnutí materiálu, mohou být narovnány do požadovaného tvaru pomocí proudu teplé vody nebo vzduchu (fén na vlasy). Ohnuté 3D tisky narovnejte ponořením do horké vody, srovnejte je a zchladte studenou vodou. K lepení použít kyanoakrylátové lepidlo! Kontaktní plochy doporučujeme před lepením odmastit.

Různé drátky a tyčinky nejsou přiloženy.


Parts slightly distorted and bent owing to temperature changes or due to material aging can be straightened to requested shape by hot water or hot air jet (hair dryer). This process can be repeated till result is entirely satisfactory. You can also correct bent 3D printed parts: put them into hot water, straighten them and cool them in cold water. For best result use cyanoacrylate glue! Ungreasing contact areas is recommended before gluing. Wires and rods not included.

**Special Hobby offer for F-16MLU / Revell kit
as well:**


**7470 F-16MLU
Cockpit 1/72**



**7470 F-16MLU
Gun Bay 1/72**



**7471 F-16MLU
Wheel Bays 1/72**

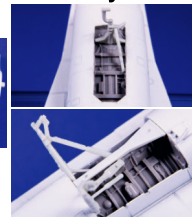

more at www.specialhobby.eu

Special Hobby, Mezilesí 718, Praha 9, 193 00, Czech Republic
e-mail: office@specialhobby.eu