



**P48045** **SMB-2 Super**  
**1/48** **Mystère Air Brakes**  
for SH and Azur/Frrom kits

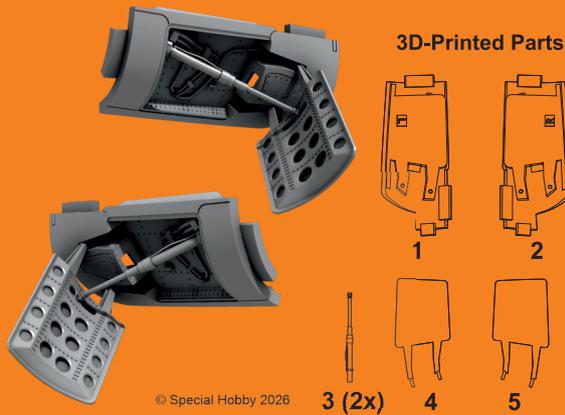


© Special Hobby 2026

**vyříznout a vyzkoušet usazení na sucho**  
**remove and dry fit first**

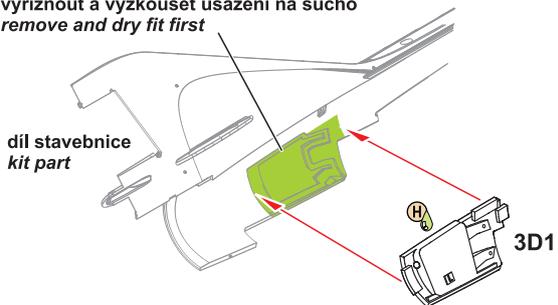

**vyříznout a vyzkoušet usazení na sucho**  
**remove and dry fit first**

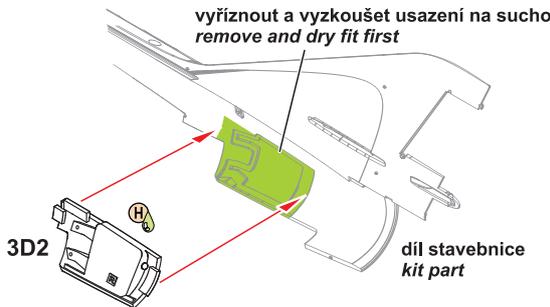

Resinové díly ohnuté popř. pokroucené vlivem teplotních změn a stárnutí materiálu, mohou být narovnaný do požadovaného tvaru pomocí proudu teplé vody nebo vzduchu (fén na vlasy). Ohnuté 3D tisky narovnejte ponořením do horké vody, srovnejte je a zchlaďte studenou vodou. K lepení použít kyanoakrylátové lepidlo! Kontaktní plochy doporučujeme před lepením odmastit.  
Různé drátky a tyčinky nejsou přiloženy.

*Parts slightly distorted and bent owing to temperature changes or due to material aging can be straightened to requested shape by hot water or hot air jet (hair dryer). This process can be repeated till result is entirely satisfactory. You can also correct bent 3D printed parts: put them into hot water, straighten them and cool them in cold water. For best result use cyanoacrylate glue! Ungreasing contact areas is recommended before gluing. Wires and rods not included.*

**SH offer for 1/48 SMB-2 kit as well:**


**P48014**  
**SMB-2 Super Mystère**  
**Ladder (IAF type)**



**P48023**  
**SMB-2 Super Mystère**  
**Ladder (Armée de l'Air type)**



**more at [www.specialhobby.eu](http://www.specialhobby.eu)**

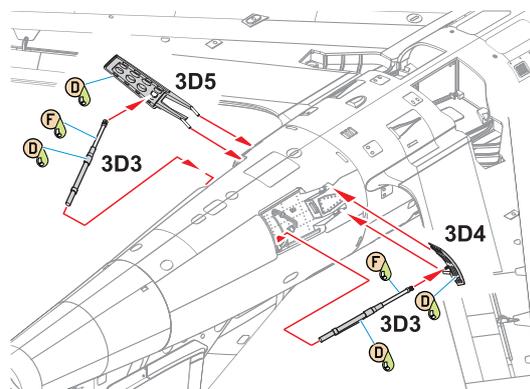

**GUNZE Colour No.**

<b>D</b>	Matný hliník / Dull Alu.	H8+11 / C8+62
<b>F</b>	Chromová / Chrome Silver	Mc211
<b>H</b>	Krémová žlutá / Cream Yellow	H34