


**P48043**  
**1/48**

**SMB-2 Super**  
**Mystère Seat**

for SH and Azur/From kits



**3D-Printed Parts**

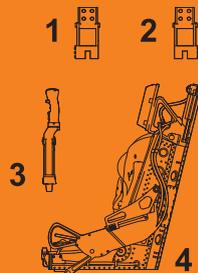


© Special Hobby 2026

Resinové díly ohnuté popř. pokroucené vlivem teplotních změn a stárnutí materiálu, mohou být narovnaný do požadovaného tvaru pomocí proudu teplé vody nebo vzduchu (fén na vlasy). Ohnuté 3D tisky narovnejte ponořením do horké vody, srovnejte je a zchladte studenou vodou. K lepení použít kyanoakrylátové lepidlo! Kontaktní plochy doporučujeme před lepením odmastit. Různé drátky a tyčinky nejsou přiloženy.

*Parts slightly distorted and bent owing to temperature changes or due to material aging can be straightened to requested shape by hot water or hot air jet (hair dryer). This process can be repeated till result is entirely satisfactory. You can also correct bent 3D printed parts: put them into hot water, straighten them and cool them in cold water. For best result use cyanoacrylate glue! Ungreasing contact areas is recommended before gluing. Wires and rods not included.*

**SH offer for 1/48 SMB-2 kit as well:**

P48014  
SMB-2 Super Mystère  
Ladder (IAF type)

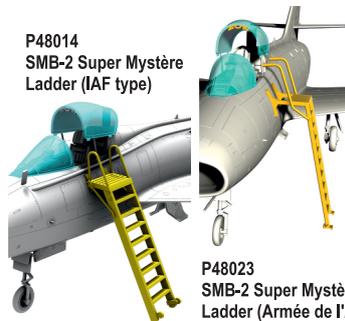

P48044  
SMB-2 Super Mystère  
Wheels





P48045  
SMB-2 Super Mystère  
Air Brakes



P48023  
SMB-2 Super Mystère  
Ladder (Armée de l'Air type)

more at [www.specialhobby.eu](http://www.specialhobby.eu)

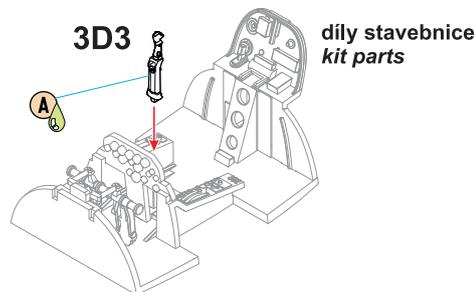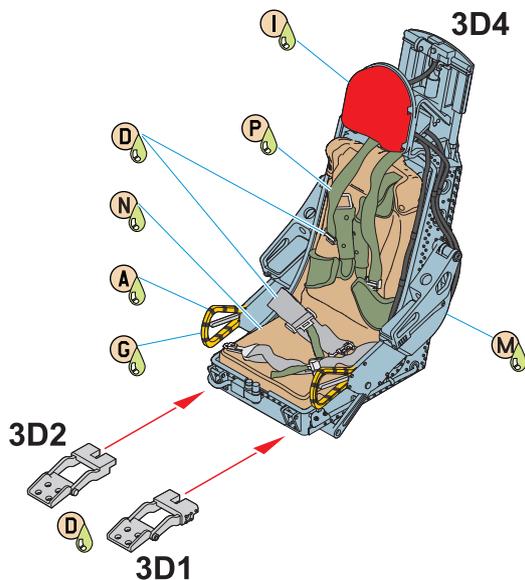

díly stavebnice  
kit parts

**GUNZE Colour No.**

<b>A</b>	Černá / Black	H12 / C33
<b>D</b>	Matný hliník / Dull Alu.	H8+11 / C8+62
<b>G</b>	Žlutá / Yellow	H4 / C4
<b>I</b>	Červená / Red	H3 / C3
<b>M</b>	Letecká šedá / Aircraft Gray	H57 / C73
<b>N</b>	Písková / Tan	H51 / C44
<b>P</b>	Šedozelená / Grey Green	H336 / C336